

MANUAL ADDENDUM - PLEASE READ

1. Overview

This MANUAL ADDENDUM provides information in addition to the Installation and User’s Manual supplied with the unit. Please review this document - as well as the supplied manual - carefully before using the Studio Panel LED Luminaire.

Some notes about this document:

- Your Studio Panel LED Luminaire has been updated with the latest firmware (version 1.2 or later).
- Please refer to the new menu categories and options table and custom recording options below.
- Table 1 in this addendum supersedes Table 5 on page 13 of the installation and user's manual.

2. Updated Menu Categories and Options



Note: All options in grey shading are added in software version 1.2 (or later). All other options remain unchanged.

Table 1: Menu Categories and Options (Software Version 1.2 and later)

Category	Options	Next Level			Meaning
Mode	Manual <i>(Manual mode, local control only (no DMX))</i>	Setting	Factory	Dimmer	Rotate wheel to set dimmer level from 0 to 100% (in 1% increments)
				CCT	Rotate wheel to set CCT level from 3000K to 6000K (in 1K increments)
			Custom	Preset (01 - 09)	Allows users to set and adjust Presets, Dimmer, and WW / CW (CCT) to their specific requirements.
				Dimmer (0 - 100%) WW (Warm White) 0-100% CW (Cool White) 0-100%	
	DMX-8B <i>(Unit is set to operate in DMX512 8-Bit mode)</i>	Address			Sets the units DMX512 address (from 001 to 512)
		LastHold			Sets the units operation should DMX512 signal be disconnected or lost - YES (maintain last DMX512 state) or NO (do not maintain last DMX512 state)
		State			Information only - displays if DMX512 is present (connected) or not
	DMX-16B <i>(Unit is set to operate in DMX512 16-Bit mode)</i>	Address			Sets the units DMX512 address (from 001 to 512)
		LastHold			Sets the units operation should DMX512 signal be disconnected or lost - YES (maintain last DMX512 state) or NO (do not maintain last DMX512 state)
		State			Information only - displays if DMX512 is present (connected) or not

3. Recording and Saving a Custom Preset

Table 2: New Menu Categories and Options

Category	Options	Next Level			Meaning
Mode	Manual	Setting	Custom	Preset (01 - 09)	Allows users to set and adjust Presets, Dimmer, and WW / CW (CCT) to their specific requirements.
				Dimmer (0 - 100%)	
				WW (Warm White) 0-100% CW (Cool White) 0-100%	

To record / edit a custom preset:



CAUTION: Do not power down the unit before waiting at least five seconds has passed after completing the steps below to record and save a custom preset. Powering the unit down before waiting five seconds will erase the custom preset.

Step 1. In Manual Mode:

- a. If **Setting Custom** is displayed, proceed to Step 2.
- b. If **Setting Factory** is displayed, you must:
 - 1) Press navigation wheel once.
 - 2) Rotate navigation wheel until **Setting Custom** is displayed.
 - 3) Press navigation wheel once. Proceed to Step 2.

Step 2. Rotate navigation wheel to desired preset number (1, 2, 3, 4...9)

Step 3. Press navigation wheel once.

Step 4. Rotate navigation wheel to **Dimmer**.

Step 5. Press navigation wheel once.

Step 6. Rotate navigation wheel to desired intensity (0-100%)

Step 7. Press navigation wheel once.

Step 8. Rotate navigation wheel to **WW CW**.


Step 9. Press navigation wheel once.

Step 10. Rotate navigation wheel clockwise or counter-clockwise to desired color temperature (0-100% 0-100%).


Step 11. Press navigation wheel once.

Step 12. Once complete, preset and its associated settings will be automatically saved after five seconds.

For assistance regarding the use of this product or this new feature, please contact customer service at +1.214.647.7880 or you local Authorized Selecon Dealer.

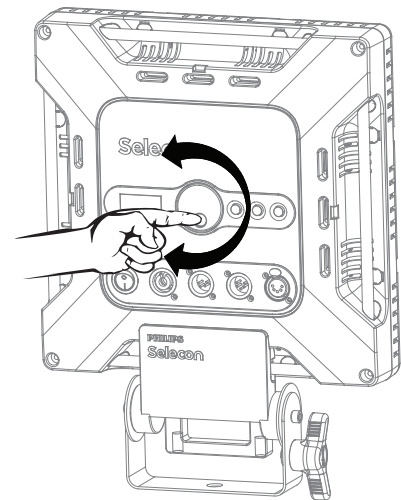

Rotate Navigation Wheel, in either direction, to scroll through menu options.

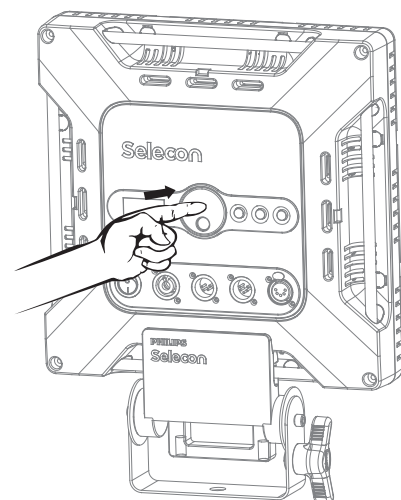

Press Navigation Wheel once to select a menu option.